


PATENT NO: 2014100825

ENDURAPANEL® INSTALLATION INSTRUCTIONS

STEPS:

- Plan layout before starting.
- End joints must be staggered unless on a stud or joist.
- Ensure all cuts are fully coated with Endurapanel® 2 process coating system.
- Apply Endurapanel® coloured primer liberally to cut edge, wiping off excess with a rag.
- Ensure that external applications are secured with a galvanized or stainless steel fixings.
- Fixings at 600 centres.
- If Endurapanel® is installed on a wall with the grooves running vertically, the panels must not be installed at an angle greater than 15 degrees from vertical.
- Endurapanel® that is installed on a wall with the grooves running horizontally, must be installed at 90 degrees, (i.e a vertical wall).

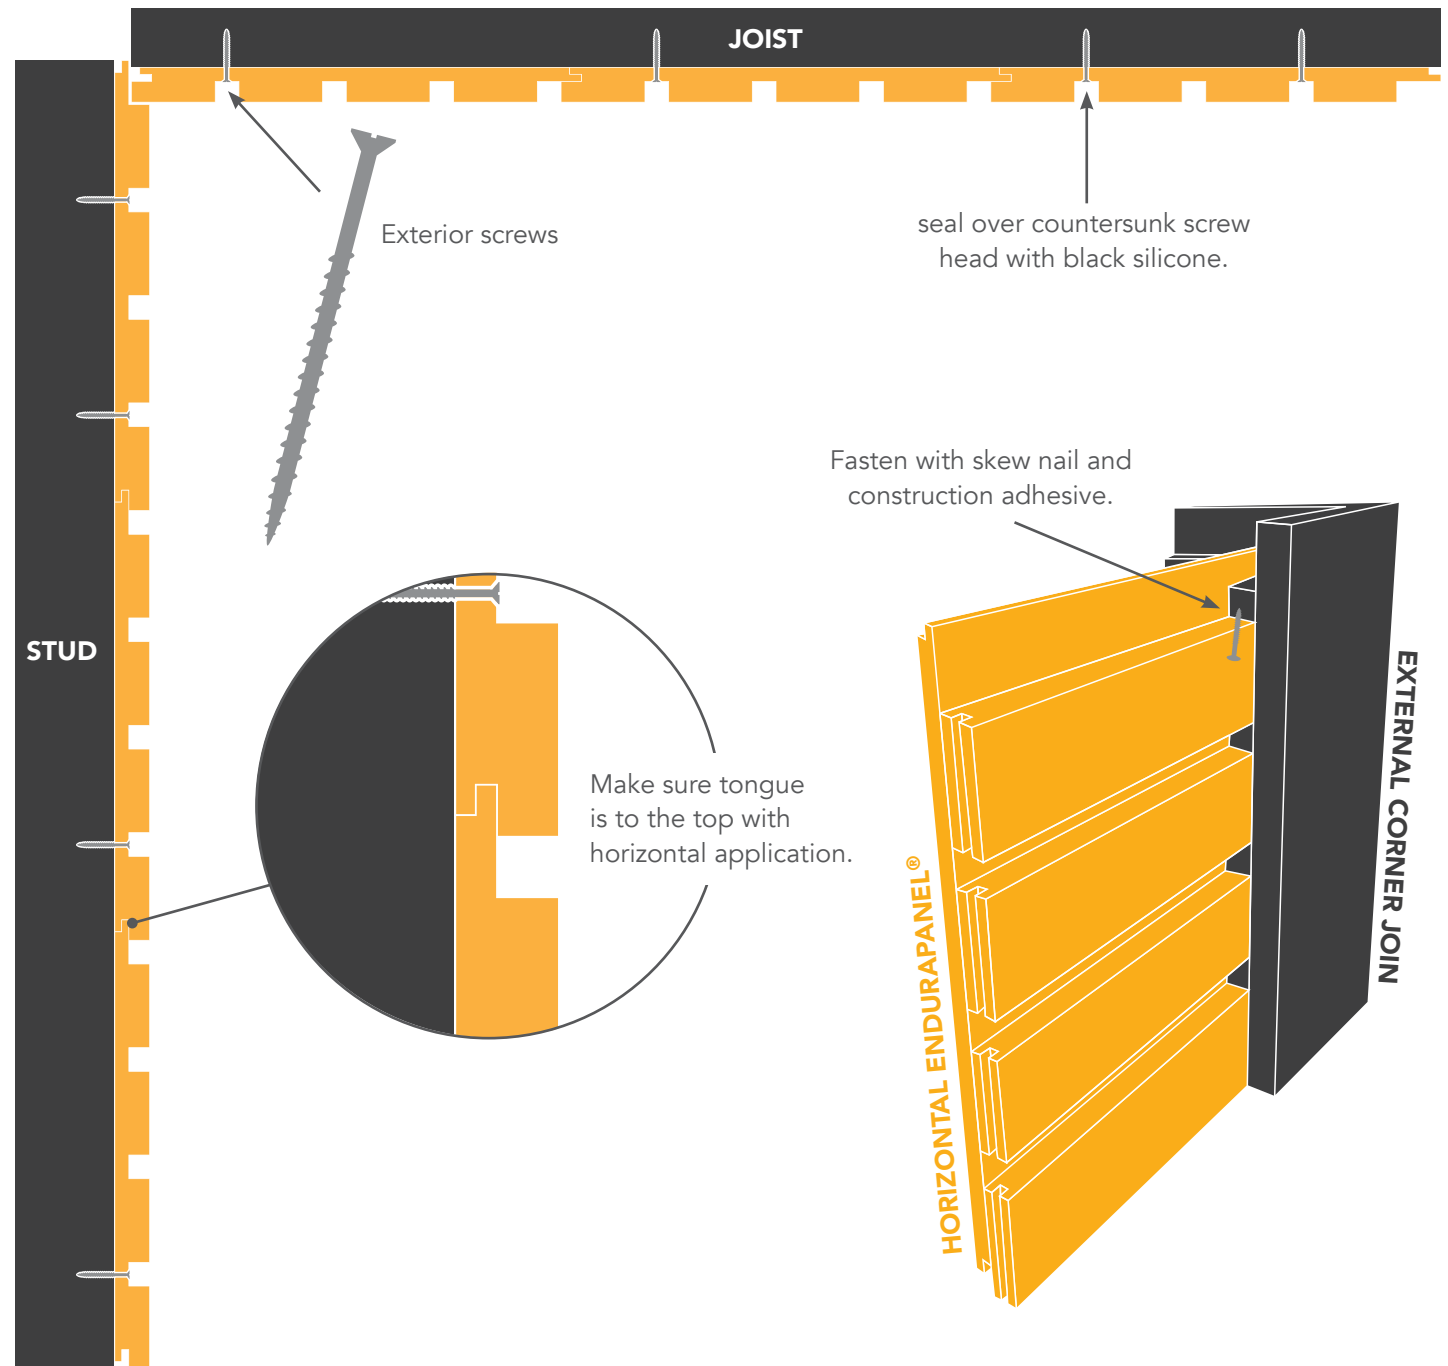

For all technical information visit www.australply.com.au